


# Instructions


## Tile Backer Boards 6mm/10mm/12mm

1

Cut to size using a sharp knife & straight edge. Take care of surface underside.

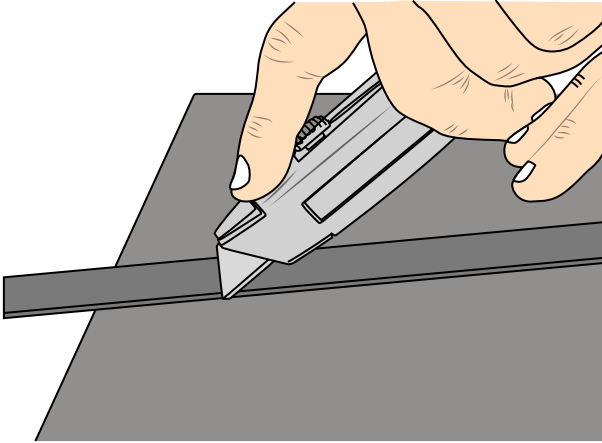


2

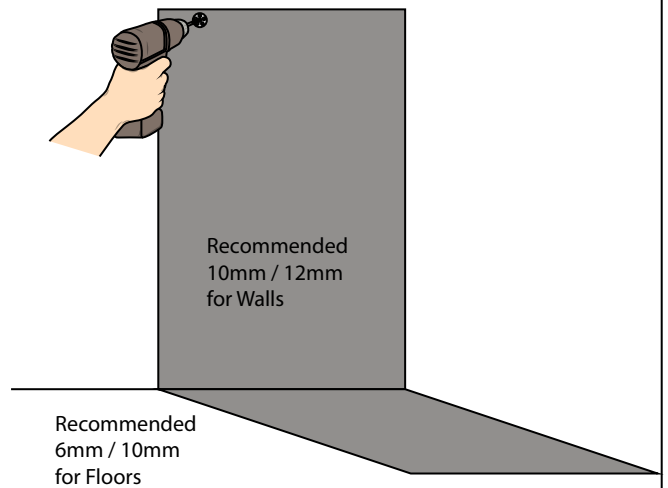

3

Fixing to firm surface, either direct to timber stud frame or other using 36mm washers (sold separately) + suitable screw

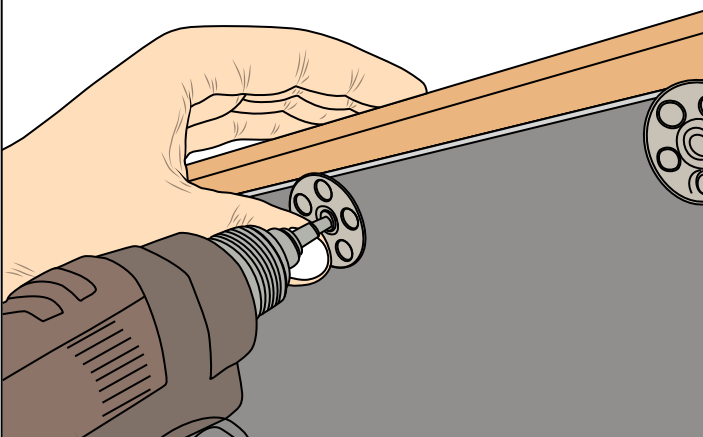

4

Manufacturers recommend 15 fixings per board

