




Tile Backer Board Waterproof Membrane (requires Liquid Tanking Paste such as Aquadefence (not supplied))

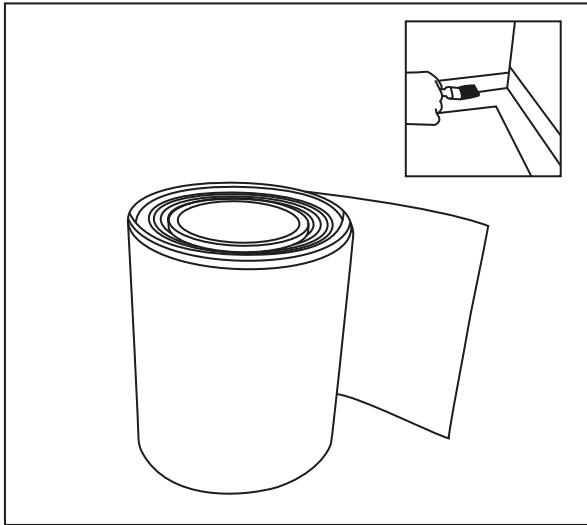


Typically 5 linear metres per 5 boards

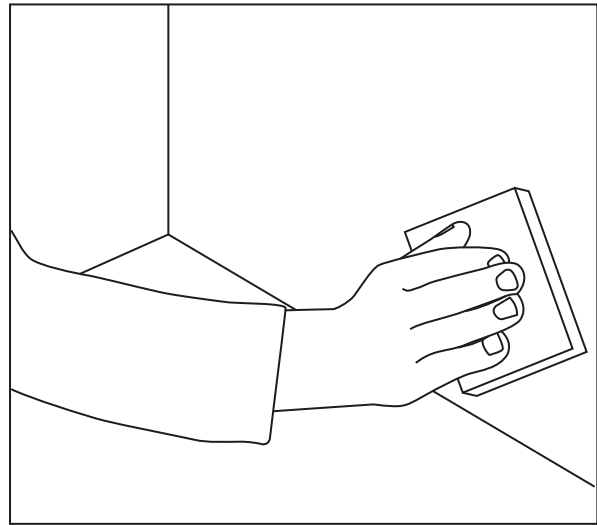


Ensure surface clean of debris.

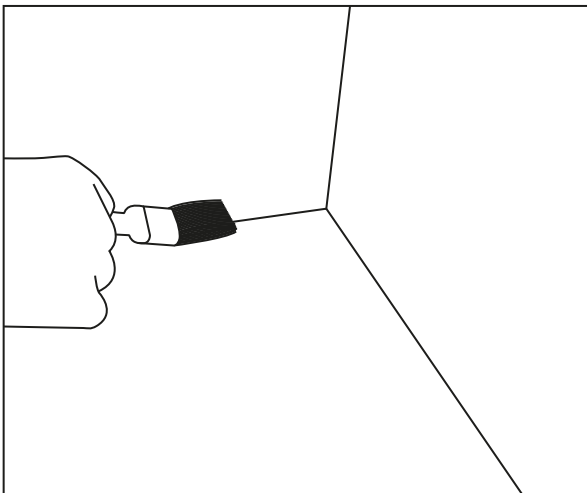

Apply liquid waterproof tanking paste (not supplied) to the joint tile board joint or corner

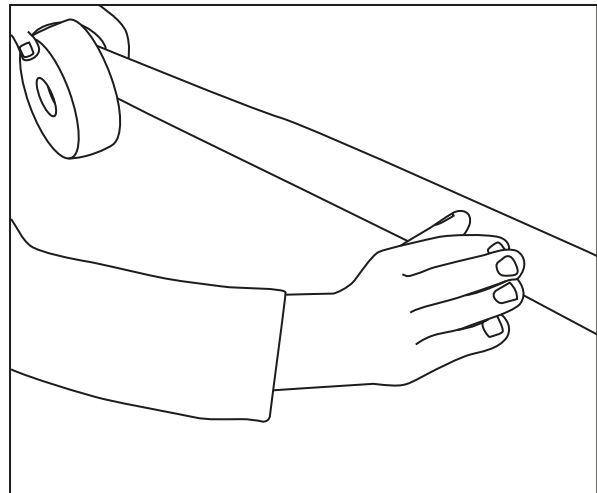

Roll waterproof jointing membrane out over desired area ensuring evenly laid, press firmly with a seam roller ensuring no creases.

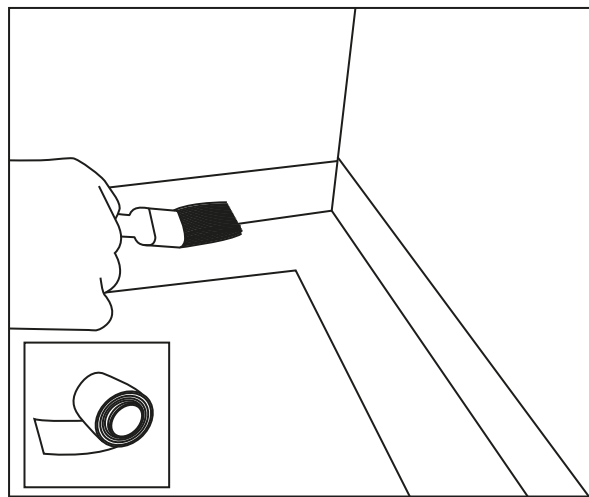

Add 1 further final top coat layer of liquid waterproof tanking paste over the entire top and edges. Leave to dry.